

EXSYS

Bedienungsanleitung  
User Manual

EX-47995

### Layout DB-9 → 5 Pin T-Block Adapter

